

K . Care, Maintenance, Storage and Transport:



WARNING!

Please follow these instructions to avoid risk of electric shock and/or short circuit.

- The product is self-service, i.e. users do not require assistance to recharge their device.
- Always disconnect the power cord from the main power outlet first.
- Do not clean the product until the unit is powered off and unplugged from the main power outlet. Once unplugged, clean using a dry or slightly damp cloth. Avoid using cleaning products and do not allow liquid to enter the device.
- Do not install in a location where a person could potentially trip on the power cord or the product.
- During care, maintenance, storage and/or transport, avoid places that are wet, humid or have a high temperature.
- Carefully read and abide by the Safety Instructions for care, maintenance, storage and transport.
- We recommend using the original packaging for transportation to protect the product from dust and humidity.

L . Note on Waste Disposal:



 
In according to the European WEEE directive, electrical and electronic equipment must not be disposed with consumers waste. The consumer is committed by law to deposit electrical and electronic devices to public collecting for free. Particulars are regulated in national right.

The symbol on the product, in the manual or at the packaging alludes to these terms. With this kind of application of used devices you achieve an important share to environmental protection.



ATTENTION!

Please read the user manual completely and carefully. It is part of the product and includes important information for proper installation and use. Keep this guide to have it available any time.

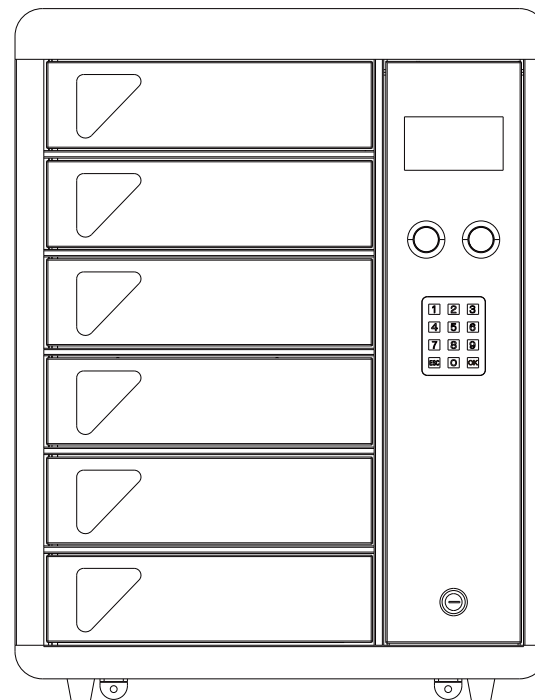

Model:**CLLK3**

A. Descriptions and Functions:

An innovative cell phone charging locker. Perfect for storing all valuables.
It charges 6 devices simultaneously and works with all Apple, Android and other popular devices.

B. Intended Use:



This product is for indoor use only in a dry area. Do not position in any location near water. Positioning this product outside, or inside in a location near water may cause damage or injury to persons or property. Please ensure you carefully read and abide by the 'Safety Instructions'.

C. Package Contents:

1pc	Charging Locker	1set	Metal Cable Clamp
1pc	Power Cord	1set	Metal Cover
1pc	User Manual		
1pc	Emergency battery holder	Optional:	
2pcs	Key	1set	Screw(B)/(C)/(D)/(E)
2pcs	L-Shape metal piece	1pc	Acrylic Advertising Board
4pcs	Rubber-Foot	1pc	Base Plate
1set	Expansion Bolt(A)	1pc	Pole(A)&Pole(B)

D. Specifications:

Model	CLLK3
Input	100-240 Vac 60Hz
No. of Locker Boxes:	6
Power Output of Each Locker Box:	5V/1.8A (Max)
Each Locker Box Contain 3 Charging Cables	

E. Warranty and Liability:

 
- We grants a conditional 1 year warranty for this device and 6 months warranty on any consumable parts such as charging cables and batteries from the date of purchase. An extended warranty may also be purchased.
- The Warranty does not cover accidental damage or vandalism caused to the product.
- If any fault or damage is detected on your device, please contact us for troubleshooting. If the issue cannot be resolved remotely, we may request the product be shipped to the our office, at the customer's expense, to verify the fault or damage, along with a copy of the original purchase invoice.
- We are not liable for damage to persons or property caused by improper installation or operation not described in this guide. Any alteration and/or modification of the product or its accessories immediately voids the warranty.
- Any use other than described in this user manual is not permitted, And causes loss of warranty, loss of guarantee, and non-liability.
- We reserve our right for misprints and changes of the device, packing or user manual.

J. Emergency:

① Administrative Mode

Set up of Admin Password,
Press "0" "OK" "0" "OK" "0" "OK"
to enter Admin Mode.

LCD Displays:

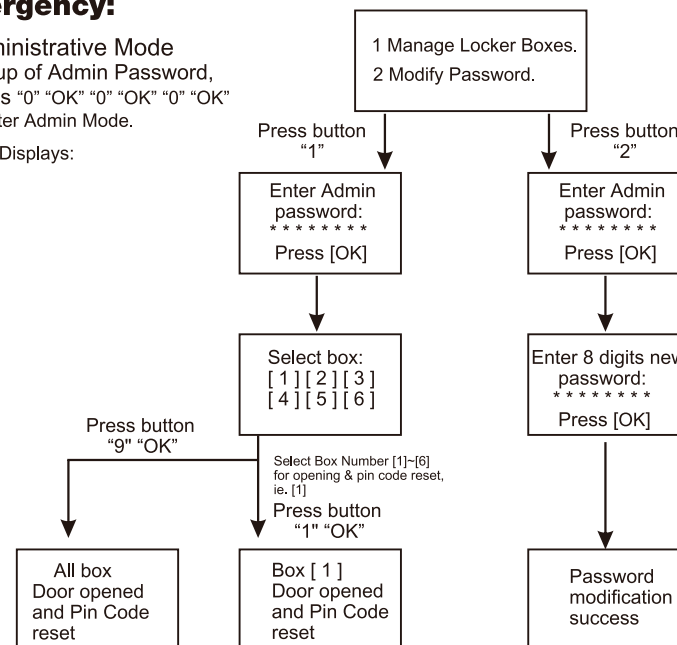

② Reset Admin Password

Press & hold Reset button for 3 seconds to reset
Admin Password to default.(#20170320)
Your New Password:

 
□□□□□□□□

 
Change Administrator Password before use. !

③ Power Outage


Insert 8 x NO.5 batteries in the emergency battery holder for emergency operation.
Connect the power cable as shown in diagram 3.

Note: No cell phone charging is supported.

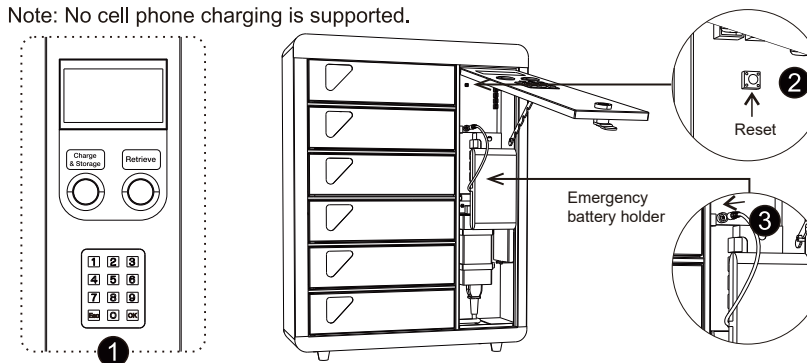

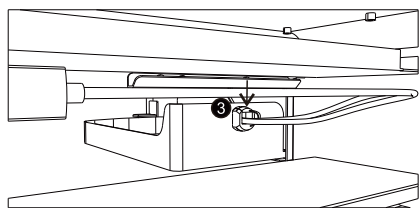

 ③ Open cable clamp by pushing the side piece toward inside

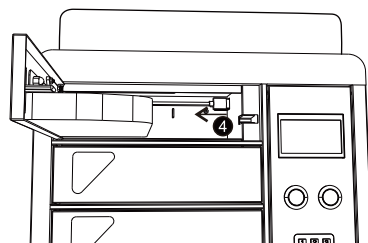


④ Replace cable.


⑤ Put back all removed parts and screws.

I . Operation:

 How to Store or Retrieve

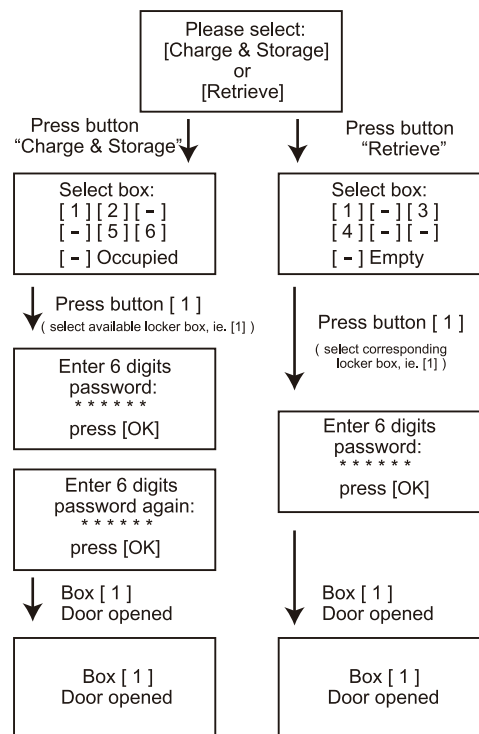

Adjust the Voiceover Volume

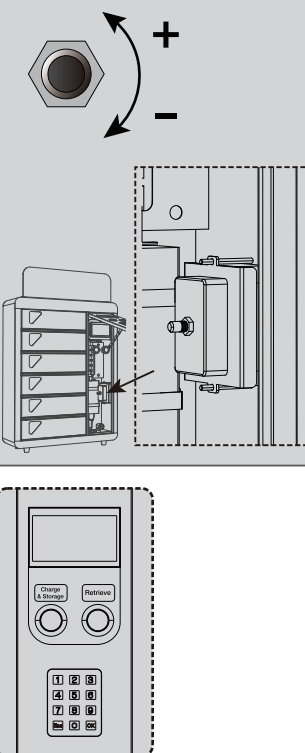 

F . Safety Instructions:



 
ATTENTION!

We recommend a skilled electrician is used to assemble and disassemble the housing of the product to avoid risk of electric shock or electrical damage to the product.


- This product is not a toy and should not be used by children at any time. It contains small parts which can be swallowed and cause serious injury.
- Ensure the product is assembled and installed in a way that prevents a person tripping over the power cable or the unit falling from its location.
- Please ensure the packing materials are disposed off completely to prevent injury to children (such as box cuts or swallowing insulation materials).
- Do not install in an area with high temperature, high humidity or areas where the charging station may come into contact with water.
- Do not install near air conditioners, or in areas with excessive dust, smoke or vibration.
- Do not modify or alter the product in any way. Any unauthorized modification or alteration will immediately void the Warranty.
- Do not use the product, or any parts, if they are damaged.
- All cables and adaptors should be connected and disconnected slowly and carefully.
- Ensure suitable packaging for transport of the product based on its 'Specifications'.

G . Connect and Operate :

Mounting on the wall

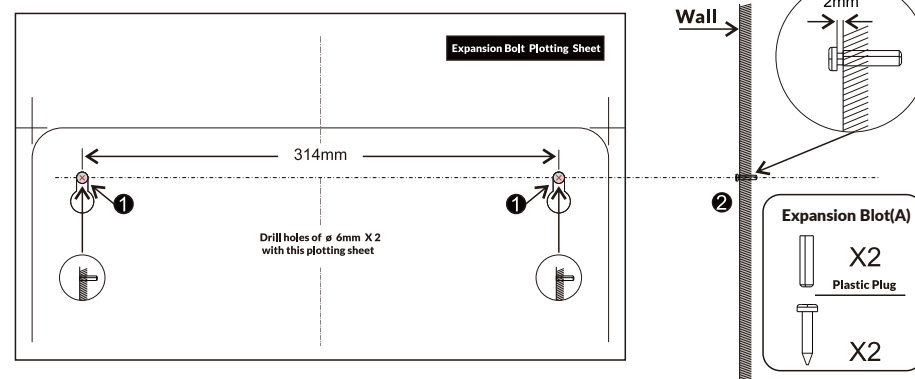


 - ① Drill holes of $\varnothing 6 \text{ mm} \times 2$ for expansion bolts according to the installation supplement sheet.
- ② Fix 2x screw in upper expansion bolts. Leave an interval of 2mm between the screw head and the wall.

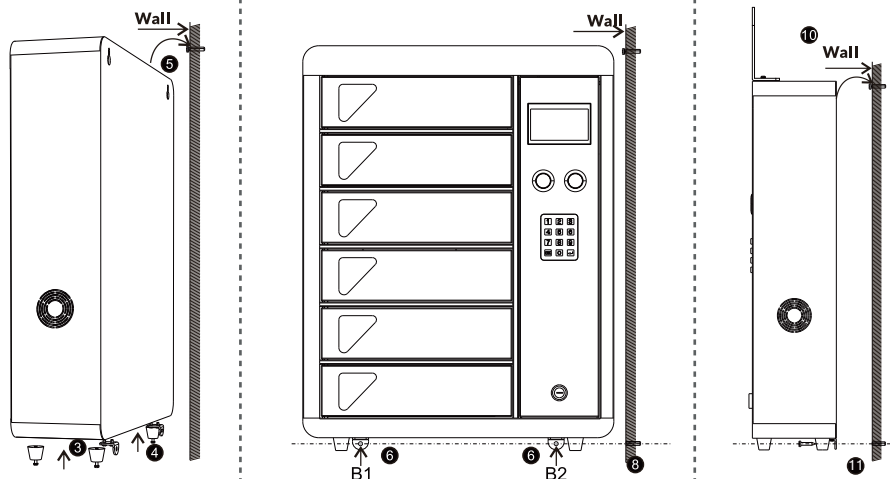


- ③ Fix 4x Rubber Foot underneath the locker (when necessary).
- ④ Fix 2x L-Shaped metal pieces underneath the locker.
- ⑤ Hang the Charging Station on to the Expansion Blot(A).
- ⑥ Mark screw holes position B1,B2.
- ⑦ Take off the Charging Station. Drill $\varnothing 6\text{mm}$ X2 holes at position B1 & B2.
- ⑧ Put Plastic Plug into B1 & B2.
- ⑨ Secure tight Acrylic Advertising Board with 2x Screw(B). (Optional)
- ⑩ Hang the charging Station on to the Expansion Blot(A) again.
- ⑪ Fix screws at B1 & B2 .

 
Expansion Blot(A)



II Floor Stand Installation (Optional)

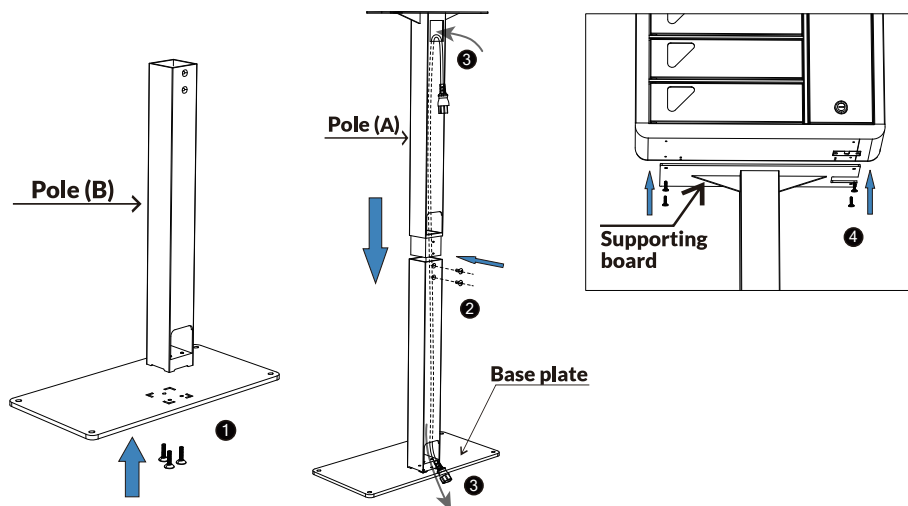 

 - ① Secure tight pole (B) on base plate with 3X screws (C).
- ② Secure tight pole (A) and pole (B) with 2X screws (D).
- ③ Put extension cable thru pole (A) and pole (B).
- ④ Install locker on supporting board with 4X screw (E).




III Advertising Board Installation (Optional)

Screw(B)



 
Acrylic Advertising Board

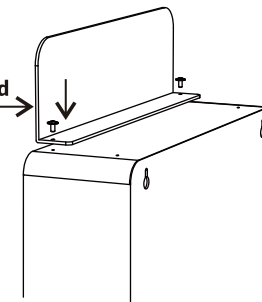


Secure tight Acrylic Advertising Board with 2x Screw(B).

IV Power Cable Connection.

 
Metal Cable Clamp

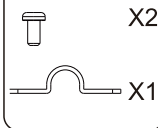


Metal Cover

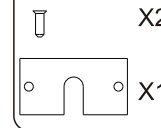 

 - ① Open locker with the key supplied.
- ② Plug in power cord, fix tight with Metal Cable Clamp and Metal Cover.
- ③ Connect power socket.
- ④ Close locker door.

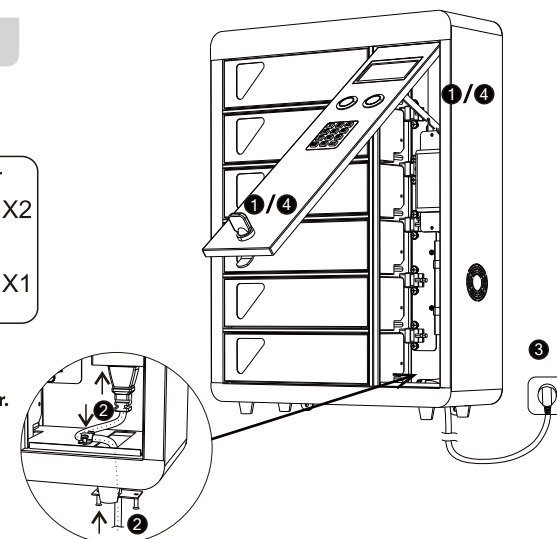

 H. Replacing Charging Cables:

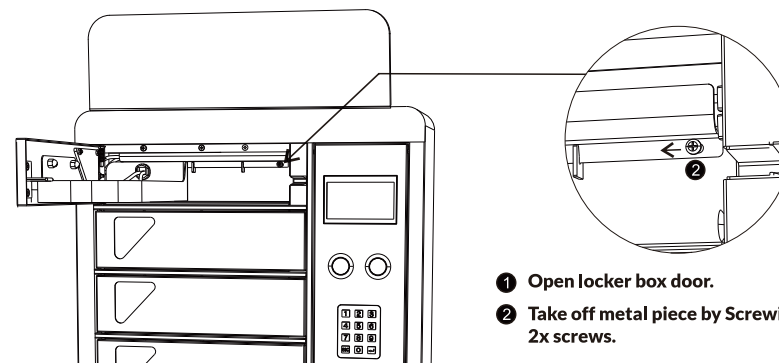

- ① Open locker box door.
- ② Take off metal piece by Screwing off the 2x screws.