

Cleaning Instructions for *ASHMA2, ASHMA3, ASHMA6, ASHMA7, ASHMA8



Use:

Stub out lighted cigarette and throw into the slot at the top of the ashtray



Emptying:

1. Place a garbage bag close to the bottom of the ashtray.
2. Open the bottom cover of the ashtray using the key provided.
3. Swing the bottom cover open and empty the content into the garbage bag



Emptying:

4. Use the brush provided to clean the bottom cover.
5. Using mild soap, clean the body of the ashtray with a damp cloth.

*Although ASHMA2 is shown in these diagrams, this instructions can be used for ASHMA3, ASHMA6, ASHMA7 & ASHMA8