 





WGC72P6T CAROUSEL CARD HOLDER INSTRUCTIONS

PARTS LIST AND QUANTITY


- | | |
|------------------------------|-----------------------|
| 1. Header (not included) - 1 | 6. Bottom Tube - 1 |
| 2. Wire Clip - 1 | 7. Base - 2 |
| 3. Top Tube - 1 | 8. Caster - 4 |
| 4. Top Shelf - 1 | 9. Bearing - 1 |
| 5. Card Holder Panels - 4 | 10. Screw and Nut - 5 |
| | 11. Lower Shelf - 1 |

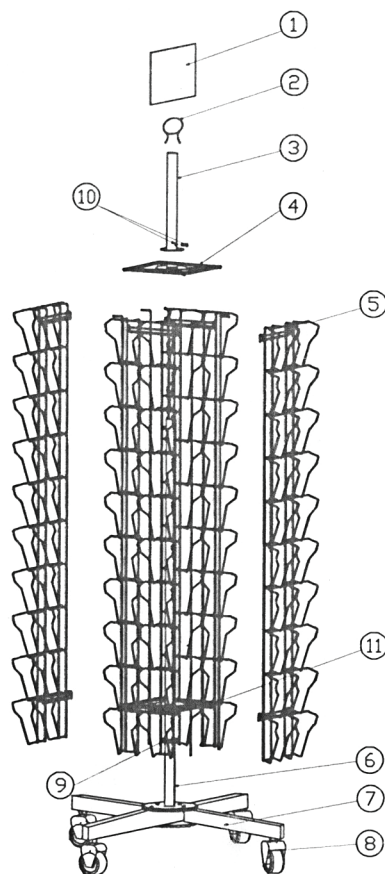


STEP 1.
Attach bottom tube to two bases with 4 pcs screws. Tighten screws, Then assembly bearing.

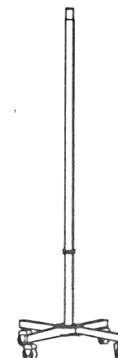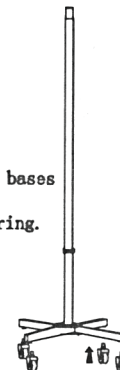

STEP 2.
Attach 4 casters to the under side of main body. Lock casters before assembling the display.

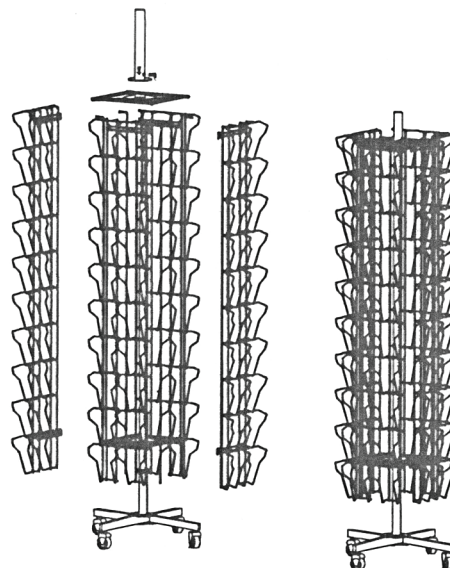

STEP 3.
Clip four panels onto lower shelf, then clip on top shelf onto four panels. Then insert top tube, tighten screw to secure top and lower tube.

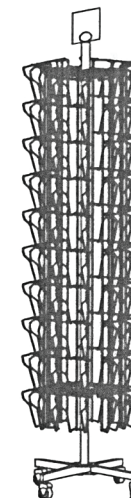

STEP 4.
Attach wire clip and header