


Fabric Display - Instructions


SKU: KHSRT2120, KHSRT2124, KHSRT2138




1. Connect poles by pressing & pushing them together.

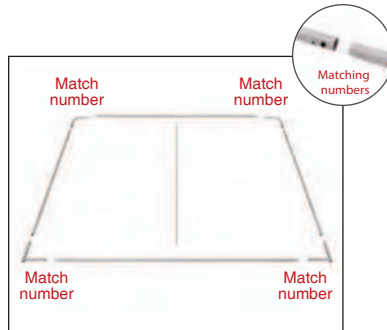

2. Connect corner sections with matching shape codes.

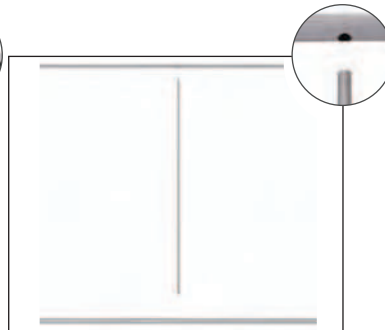

3. Insert centre support poles.

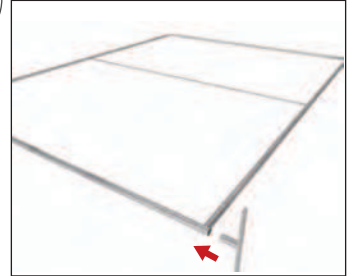

4. Connect feet to the frame by pressing & pushing.



5. Unzip print & lay face down. Slide print onto frame like a pillow case.



6. Zip the bottom edge of the graphic beyond the centre point as shown above. Zip the remaining side & bottom to meet at the corner.



7. To attach lights, slide the clamp onto the base of the light with the dial facing the back.



8. Push the fitting onto the frame in desired position and tighten the clamp to hold into place.
WARNING!
OVERTIGHTENING
MAY CAUSE DAMAGE
TO FABRIC IMAGE.



Note: After disassembling, fold the fabric and place into plastic bag to protect your print for the next trade show.