



Fabric Display - Instructions


SKU: KHWAVE24, KHWAVE30, KHWAVE60

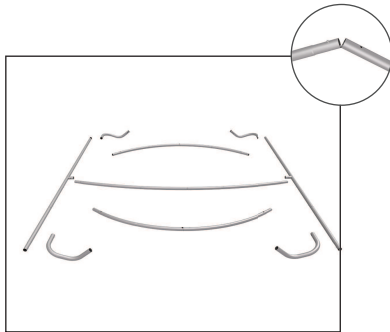


1. Assemble the two long curved and long straight sections.

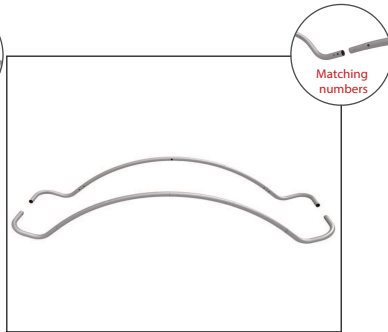

2. Connect corner sections to curved sections by matching numbers.

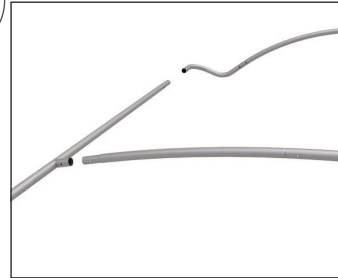


3. Make sure that the middle support is fitted into the frame.

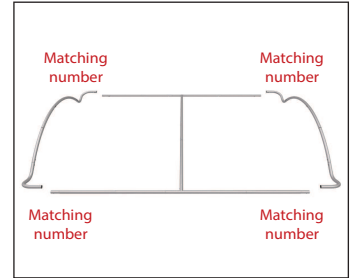


4. Connect corner sections to straight sections by matching the numbers.




5. Unzip the fabric sleeve and lay the image face down. Slide the fabric sleeve onto frame.

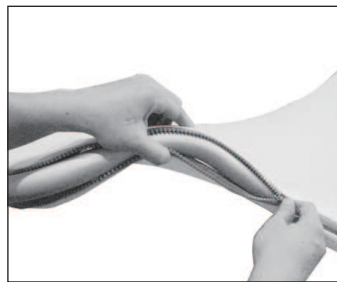

6. Zip the bottom edge of the graphic beyond the centre point as shown above. Zip the remaining side and bottom to meet at the corner.

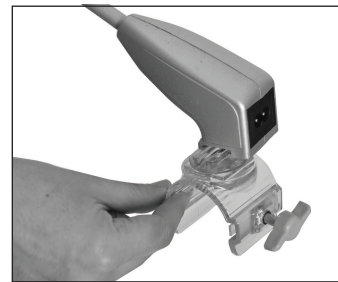

7. To attach lights, slide the clamp onto the base of the light with the dial facing the back.

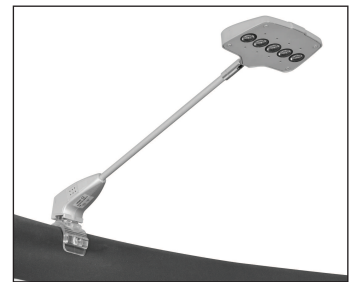


8. Push the fitting onto the frame in desired position and tighten the clamp to hold into place.
WARNING!
OVERTIGHTENING
MAY CAUSE DAMAGE
TO FABRIC IMAGE.




Note: After disassembling, fold the fabric and place into plastic bag to protect your print for the next trade show.

Fabric Counter- Instructions

SKU: KHCNT26E

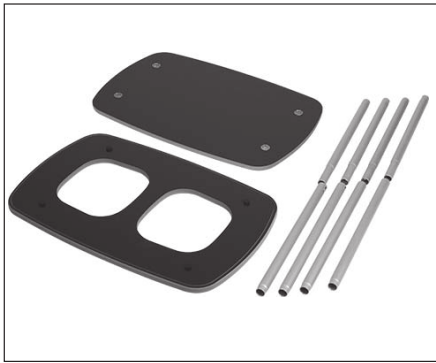


1. Remove all components from the case.

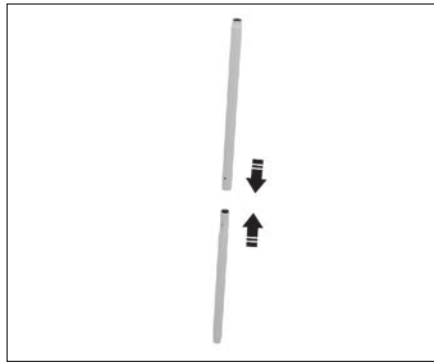

2. Join poles to form 3 support poles.



3. Insert support poles into the base and place counter on top.

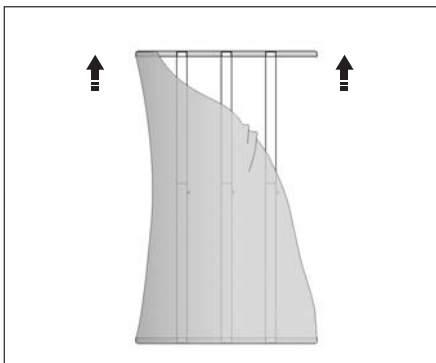

4. The fabric can now cover the frame from the bottom up.



5. Tuck the edge of the fabric into the groove of the table top to secure.



6. Counter is ready for use.

Note: After disassembling, fold the fabric and place into plastic bag to protect your print for the next trade show.