


Wayfinding Signs - Instructions



1. Release bottom of the ceiling fitting by squeezing the loop.




2. Determine the position of the sign and drill a hole for each fitting into the ceiling. Screw the top half of the fitting into the ceiling.

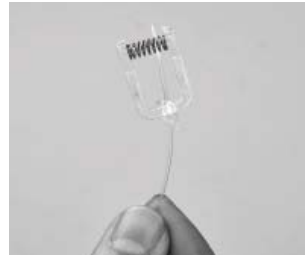

3. Tie fishing wire to the bottom half of the ceiling fitting.



4. Thread through a joiner, followed by a grip on each wire. For 2 tiers, add another joiner and grip.

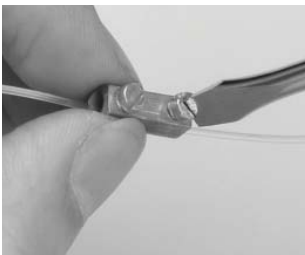

6. Slide the grip into desired position. Tighten the grip onto the wire using a screwdriver.



7. Remove the cap of the sign display.



8. Holding two signs back to back insert the joiners into the channels of both sign holders. Place end cap back onto the sign holder.



9. Insert sign by first removing the lens using the suction cap. Place graphics within then reinsert the lens.



10. Reattach the bottom of the ceiling fitting, making sure the sign displays are firmly attached to the wire.



11. Check that the display is in position and adjust where necessary. Once checked, cut excess wire from the bottom of the sign.