

 
Portable Speaker with Microphone User Manual

SKU: PPA5H

Features:

- 1.This speaker can work with any devices (Computer, DVD, VCD, TV, MP3, Guitar, Electronic piano, etc ...) with AUX output.
- 2.Output power 30W with 4 inch Bass Speaker and 1.5 inch Treble Speaker.
- 3.2*2500mAh A grade Lithium battery, which can support 5-6 hours working time.
- 4.Bluetooth 5.0, which can support sync music play and wireless karaoke.
- 5.True Wireless Stereo (TWS function).
- 6.Support FM, TF card/USB flash drive play.
- 7.UHF Wireless through-wall technology, high sensitivity Moving-Coil microphone, stable signal and clear sound (Only UHF wireless version).

Function illustration:

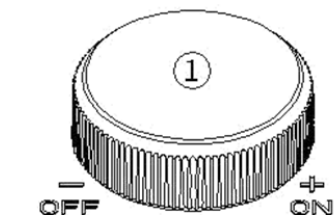


1.Power/Volume: Rotate the knob to "on" till the display light up to turn on the speaker. During start-up status,rotate the knob clockwise to "+" to continuously increase the volume; rotate the knob to "-" to decrease the volume. Rotate the knob to "off " to turn off the device.



②

 2.Digital display screen: Support power display, FM radio frequency display, music play time display and Bluetooth display.

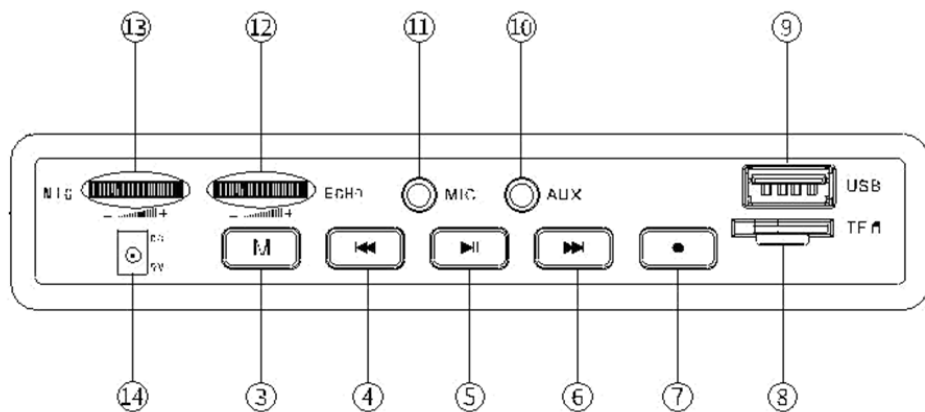

3.Mode selection: Short press “M” to select TF card mode/USB flash drive mode/Bluetooth mode/AUX in mode/FM mode/UHF mode (Wireless version only).

4.Previous: Short press “⏮” to select previous audio file. Long press to Songs Fast back.

5.Play/Pause: a.In music play mode, press it to pause; press it again to play;

b.In any mode, double press the “⏸” button to close the voice prompt of the speaker, and double press the “⏸” button again to turn on the voice prompt of the speaker.

6.Next: Short press “⏭” to select next audio file.Long press to Songs fast forward.

7.Recording

8.TF card slot: Support TF card play, with a voice prompt “TF card playing”. Maximum support 32GB TF card with MP3 /WAV /WMA format.

9.USB slot: Support USB flash drive play, with a voice prompt “USB flash driver playing”. Maximum support 32GB USB flash drive with MP3 /WAV /WMA format.

10.Audio input: After connecting the speaker with external audio sources such as computer, mobile phone, MP3/MP4, etc., the speaker screen displays “AUX” mode, and the above audio source can be played directly.

11.MIC slot: Insert the wired microphone with Ø3.5mm plug (The wireless version don't include wired microphone).

 
12.ECHO: To adjust echo effect of MIC.

13.MIC volume: Rotate the knob clockwise to “+” to continuously increase the volume; rotate the knob to “-” to decrease the volume.

14.DC 9V: Please use the DC 9V power adapter to charge the speaker.

TF card/USB flash drive function instruction:

After inserted the TF card / USB flash drive into the slot of TF card /USB flash drive according to the direction of the speaker identification, the speaker will automatically play the music file of TF card /USB flash drive, and the previous song and the next song can be selected by press the “◀”/“▶” button.

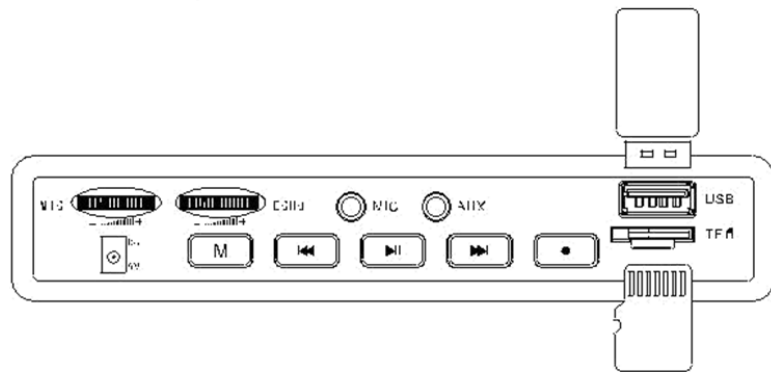

REC Function:

1. Connected the wireless or wired microphone, then insert the storage (USB flash drive or TF card). Press “●” key and hold on to enter into REC mode, the time display on LED screen will flashing. Press “●” key again to stop recording, it would save the audio files and play the recordings.
2. In music mode, short press “●” to enter into recordings play mode with inserting storages (which have recordings). It will play the last recording by default and please press “◀”/“▶” button to select the previous and next recordings.

Bluetooth Function:

Step 1: Switch on the speaker and press “M” to enter into Bluetooth mode. (The Bluetooth mode is ready with voice prompt “Bluetooth is waiting for connection” and “BLUE” on the screen keep flashing.)

Step 2: Turn on the Bluetooth function of your mobile phone and search “H5”. Click and it will be connected successfully with a voice prompt “Bluetooth is connected”.



After successful connection, it's can play the audio files. please keep the speaker and the Bluetooth devices close for stable signal.

True Wireless Stereo function:

 
Step1: Switch on two speaker and both press “M” to enter into Bluetooth mode. Long press “M” of one speaker to enter into pairing status, when Bluetooth icon of another speaker stop flashing, which means this two speaker connected successfully.

Step2: Turn on the Bluetooth function of your device and search “H5”. Click and it will be pair successfully. Two devices will play simultaneously.

Step3: Long press “M” of one speaker to exit this function.

About Charging:


- A. When working, the battery icon on the screen flickers continuously, indicating that the battery is low, please charge it in time. Please power off speaker when charge, please use the standard adapter, the other end connects with the power supply AC 110~240V to charge. When charging, the battery icon on the screen will flicker continuously. When fully charged, the battery icon will stop flashing. Please unplug the adapter timely after fully charged, the charging time is normally 4~6 hours.
- B. In order to achieve the best effect when using the speaker for the first time, it is recommended to be fully charged before use.
- C. Please use the standard 9V 1.2A charger in accessory to charge the device.

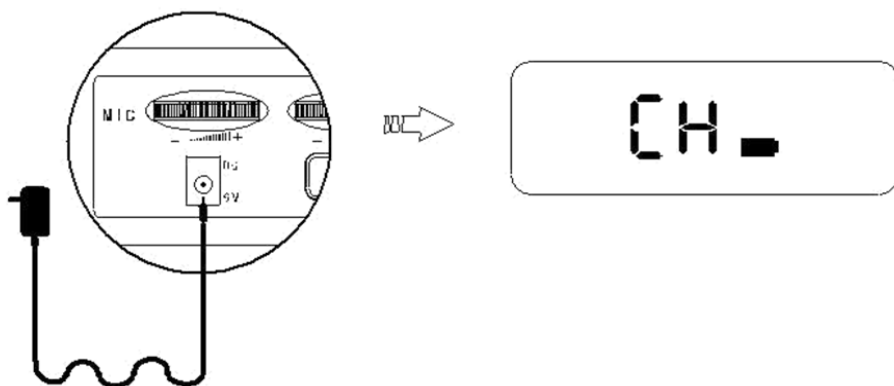

FM Function:

Switch on the speaker, short press "M" to choose the FM mode with the screen showing radio frequency; Long press "▶" to enter into automatic channels searching, after searched successfully, the device will save the channel automatically. Please press "◀" or "▶" to choose the saved channels.

 Wireless Microphone Operation: (Limited to wireless version)

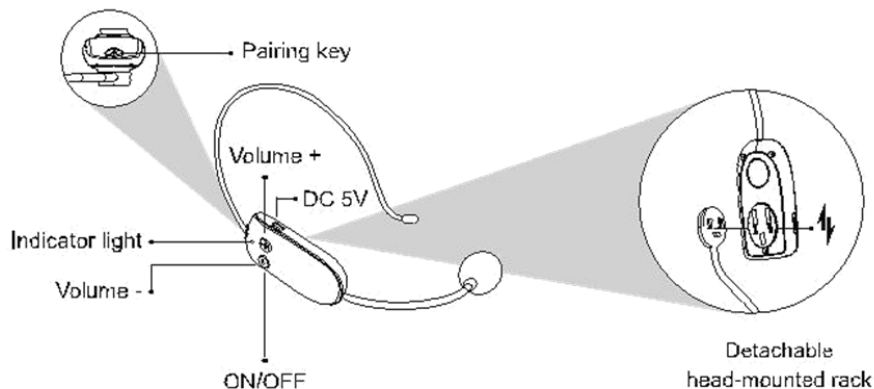

Wireless Microphone Technical Parameters:

Frequency response: 30Hz-23KHz

Output resistance: $\leq 2.2K\Omega$

Sensitivity: $-41dB \pm 1dB$ ($0dB=1V/Pa$)

Recharging voltage: DC 5V 500mAh

Working time: 3-5 hours

Charging time: 2-3 hours