


## Installation Instructions




1. Mark out the position of the stand-offs and screw the wall brackets in place using the screws and wall anchors provided

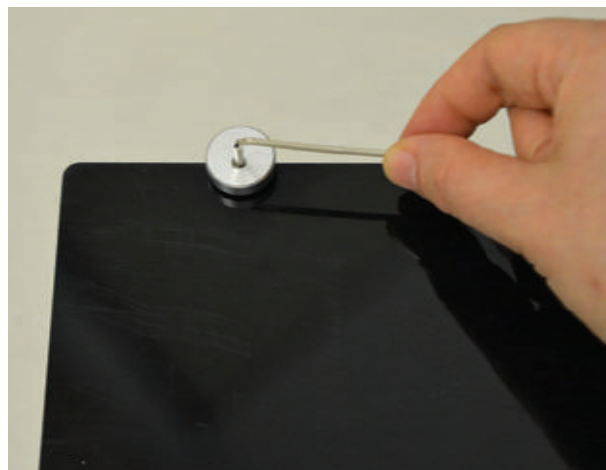

2. Slide the stand-offs onto the acrylic into the measured position and loosely fasten the grub screw as shown



3. Once the upper stand-offs are assembled to the acrylic, slide the assembly onto the wall pieces. Fine tune the position of the upper pieces as required

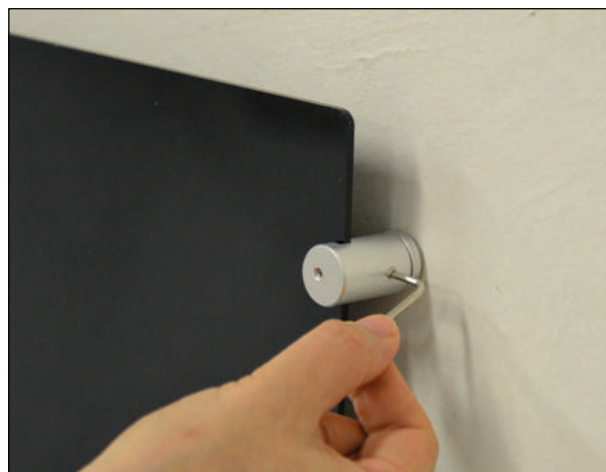

4. Finally, tighten both grub screws on each of the upper stand-offs to fasten the sign in place