


Mobile Magnetic Whiteboard Assembly Instructions

- A. Place crossbars on upright struts and join with bolts using the allen key.
- B. Join castor crossbar to upright strut. Join four castors.
Place both lockable castors at the front.
- C. Place board on frame

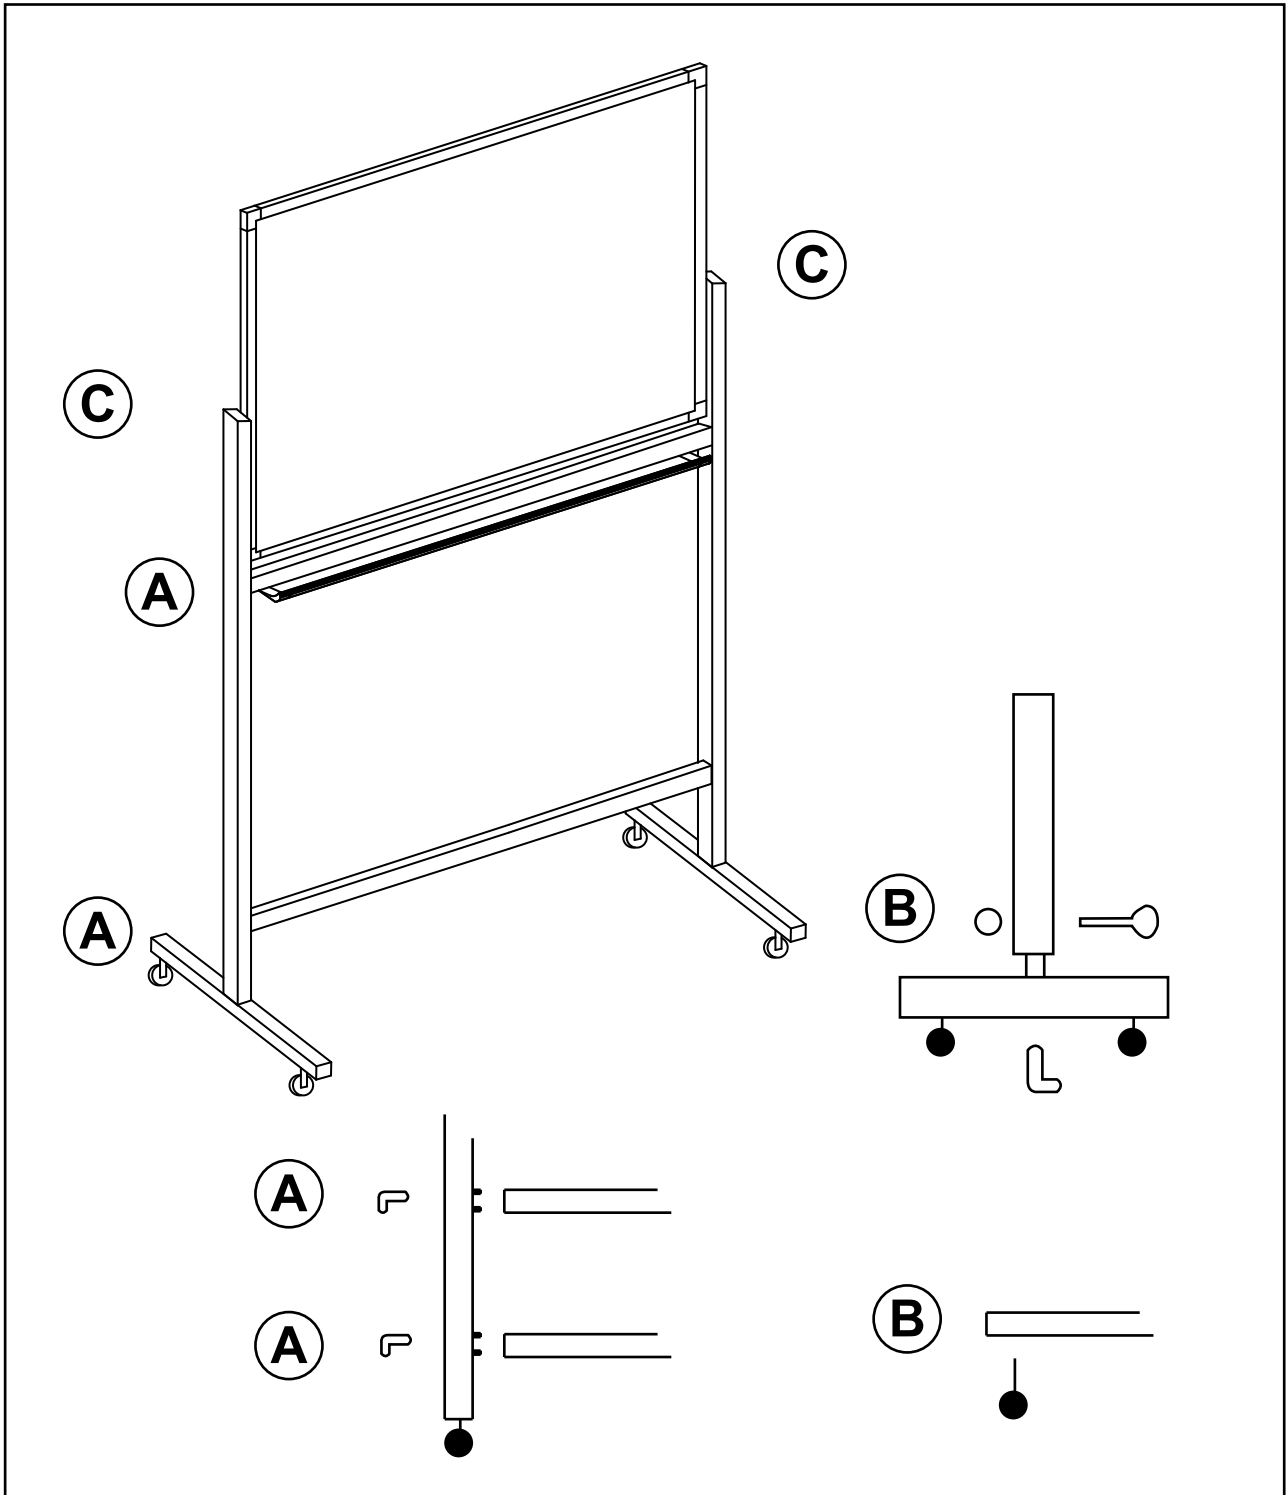

Please Note:

1. Remove the protective cover from the board surface.
2. It is important to clean the board surface with a whiteboard cleaner to remove all residue and prepare your whiteboard for use.