
## TVON06BLK POSTER TV STAND

Tha nk you for purchasing the Multi-Section Poster Tv Stand. This TV stand is designed to accommodate flat panel TVs from to 32" to 70" diagonal weighing up to 68kg. Graphics and size of posters can be designed customized, and it is easy to be installed. The base of the tv stand can be installed with additional casters making it convenient to move.


Base 2 B Column 1 C Column 1 C Column 1 D Plates E Rails F Base 2 B Column 1 D Plates E Plates C Poster Connections H Allen Key I Screw M6x22mm J Screw M6x2mm J	——————————————————————————————————————	G C	Part Base 1	ID A	QTY 2
Column 1 C 2 Column 1 D 2 Plates E 2 Rails F 2 Brackets G 2 Poster Connections H 4 Allen Key I 1 Screw Móx22mm J 4 Screw Móx22mm J 4 Screw Móx20mm K 8 Carry Bag Not shown 1 Step 1. Align the holes on base board (A) with the holes on Base 2 (B), and tighten the connecting screws (J) with Allen key (I). Step 2. Align the holes of the column (C) with the ones on the assembled base board, and tighten the connecting screws (K) with Allen key (I).					
Column 1 D 2 Plates E 2 Rails F 2 Brackets G 2 Poster Connections H 4 Allen Key I 1 Screw M6x22mm J 4 Screw M6x22mm K 8 Carry Bag Not shown 1 Step 1. Align the holes on base board (A) with the holes on Base 2 (B), and tighten the connecting screws (J) with Allen key (I). Step 2. Align the holes of the column (C) with the ones on the assembled base board, and tighten the connecting screws (K) with Allen key (I).	••• • P				-
Plates E 2 Rails F 2 Rails F 2 Poster Connections H 4 Allen Key I 1 Screw M6x22mm J 4 Screw M6x20mm K 8 Carry Bag Not shown 1 Step 1. Align the holes on base board (A) with the holes on Base 2 (B), and tighten the connecting screws (J) with Allen key (I). Step 2. Align the holes of the column (C) with the ones on the assembled base board, and tighten the connecting screws (K) with Allen key (I).	••••• D	•			
Rails F 2 Brackets G 2 Brackets G 2 Brackets G 2 Brackets G 2 Brackets G 2 Brackets G 2 Ster Connections H 4 Allen Key I 1 Screw M6x50mm K 8 Carry Bag Not shown 1 Step 1. Align the holes on base board (A) with the holes on Base 2 (B), and tighten the connecting screws (J) with Allen key (I). Step 2. Align the holes of the column (C) with the ones on the assemble base board, and tighten the connecting screws (K) with Allen key (I).					
Brackets G 2 Poster Connections H 4 Allen Key 1 1 Screw M6x22mm J 4 Screw M6x20mm K 8 Carry Bag Not shown 1		_			
Poster Connections H 4 Allen Key 1 1 Screw M6x22mm J 4 Screw M6x22mm K 8 Carry Bag Not shown 1					
Allen Key I 1 Screw M6x22mm J 4 Screw M6x60mm K 8 Carry Bag Not shown 1	<b></b>				
Screw M6x22mm J 4 Screw M6x60mm K 8 Carry Bag Not shown 1					
F Screw M6x60mm K 8 Carry Bag Not shown 1			-	J	-
Carry Bag Not shown 1 Carry Bag Not shown 1		-		ĸ	
Step 1. Step 1. Align the holes on base board (A) with the holes on Base 2 (B), and tighten the connecting screws (J) with Allen key (II). Step 1. Align the holes of the column (C) with the ones on the assembled base board, and tighten the connecting screws (U) with Allen key (U).		- (í <sub>1</sub>			
Align the holes on base board (A) with the holes on Base 2 (B), and tighten the connecting screws (J) with Allen key (I). Step 2. Align the holes of the column (C) with the ones on the assembled base board, and tighten the connecting screws (K) with Allen key (I).			curry bug into		•
Page 1 of 3	Align the holes on base board (A and tighten the connecting screw Step 2. Align the holes of the column ( assembled base board, and tigh	vs (J) with Allen key (I). C) with the ones on the nten the connecting screws			

## Stand Assembly Instruction

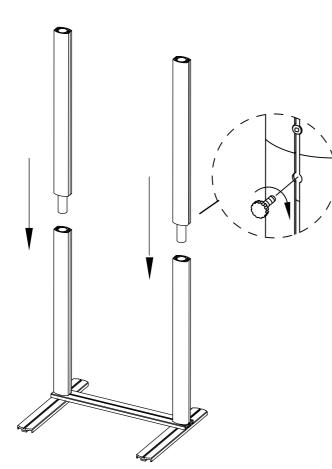


#### Step 3.

Align column (D) with column (C) and insert it into the channel.Simply tighten with hand-driven screws.

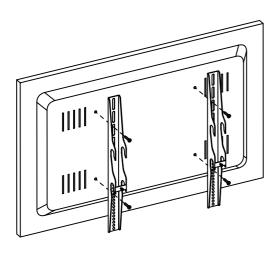


#### Step 5.

Mount Brackets (G) onto the back of the TV using bolts. Tighten Bolts with Allen Key. DO NOT OVER TIGHTEN.

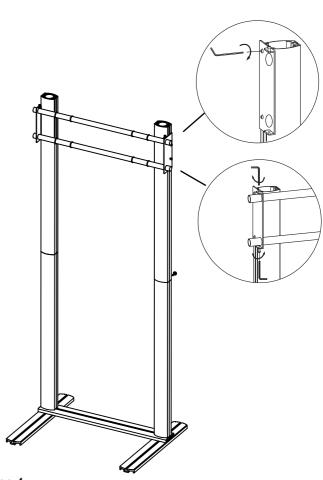

Step 4.

Insert the mounting plates (E) into the tracks of two columns, and tighten it with Allen key (I) at the prefered height. Slide rail (F) through the holes of mounting plates (E), and tighten the bolts to secure.

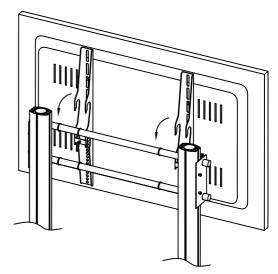





Use 2 people to lift and center TV, hooking Brackets (G) onto Rail (F). Tighten lock Bolts to secure. Figure 3. Slide O-rings against each side of TV Brackets.

# Poster Assembly Instruction

This poster tv stand can be installed with 3mm to 5mm thick of PVC printing poster, the additional accessories provided are for mounting printing board.

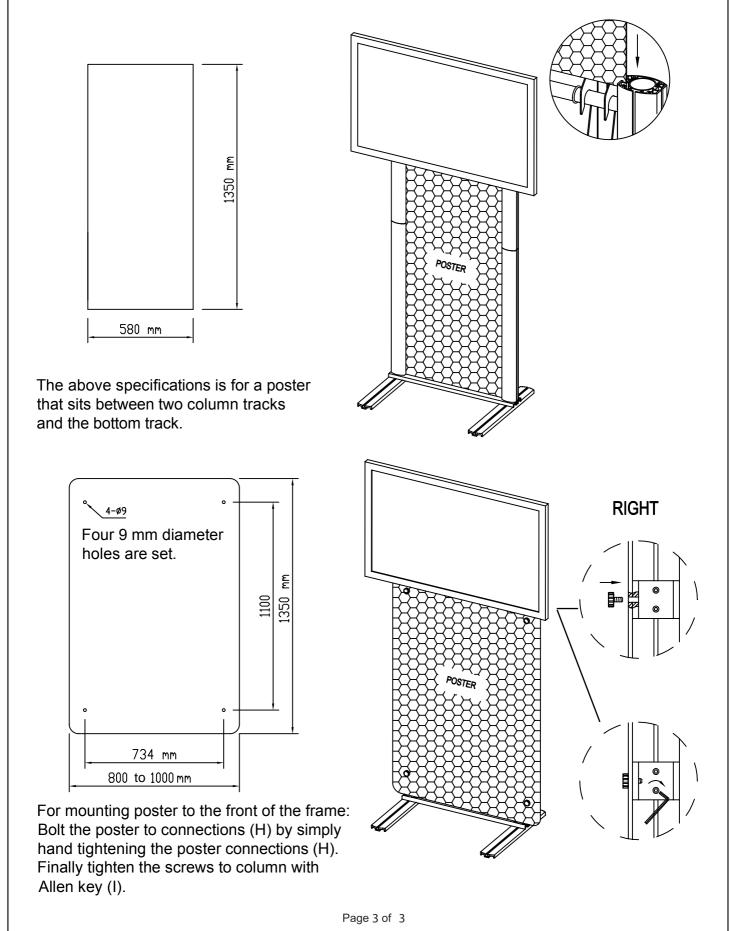

# Workstations and Brochure Holder Assembly Instruction

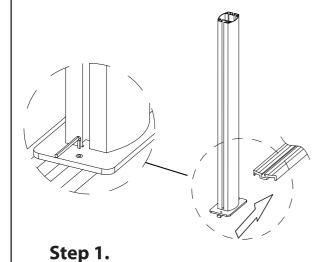


Insert the Base plates into the tracks

and tighten it with Allen key .

### Step 2.

Insert the column into the tracks, when shelves are in desired position, tighten each screw with an Allen wrench.

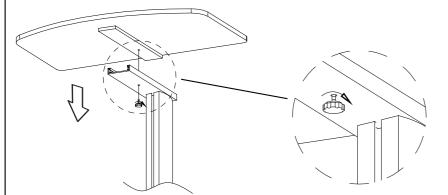

#### Step 3.

Connect the table panel with Middle Plate, align the screw holes and twist screws tightly.

