





# Wall Mounting Instructions

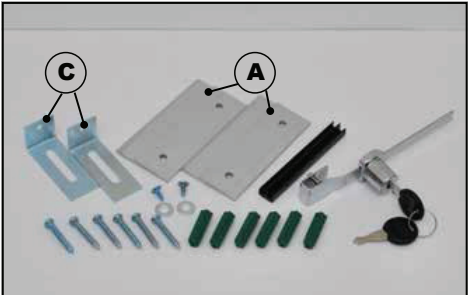



1. Mounting hardware supplied with noticeboard.

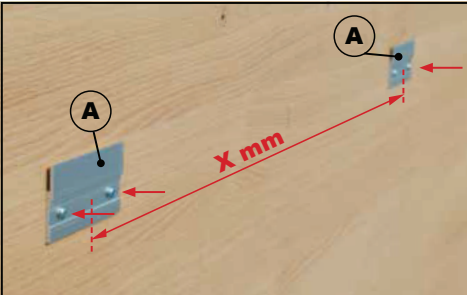


2. Screw the Z-brackets to the wall. Wall anchors are provided if mounting on to concrete wall. Distance between the brackets (X) should be equal to the distance between the mounting plate on the back of the notice board (Y).

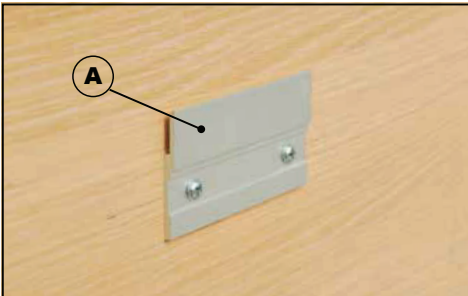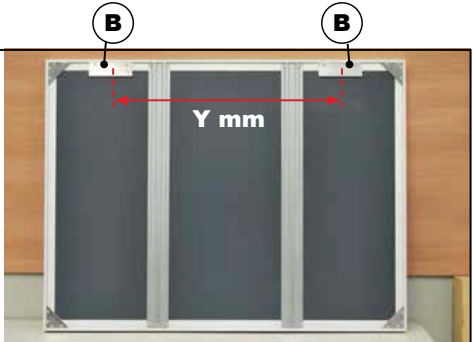


3. Lift the noticeboard over and hook the mounting plates (B) over the Z-brackets (A) as shown in Diagram A.

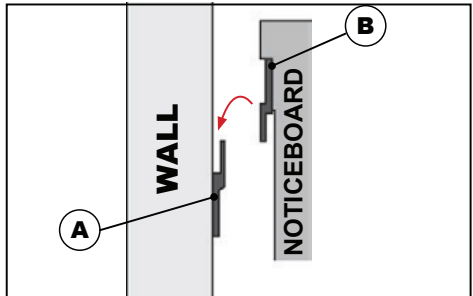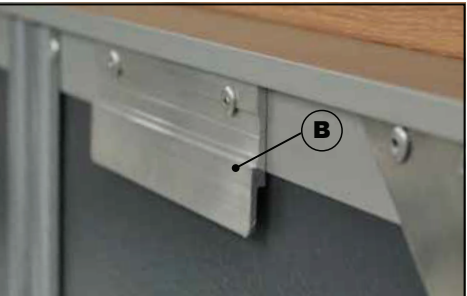

4. Diagram A. This step requires minimum 2 person to lift.

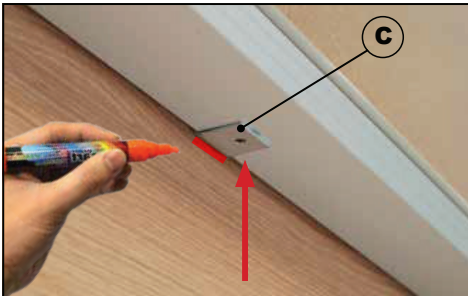

5. Align L-Bracket to the holes underneath the noticeboard and mark the position on the wall.

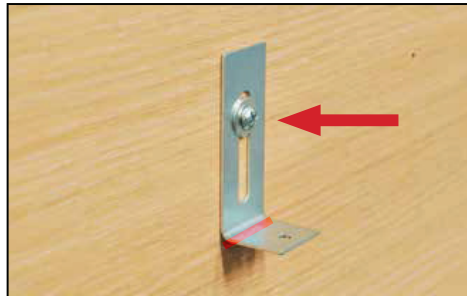

6. Remove the noticeboard. Align the L-Bracket with the marked position. Screw the L-Bracket into the wall.



7. Mount the board on the wall and screw the L-Bracket to the board to secure the board on the wall.



8. Noticeboard is ready to use.



**IMPORTANT:**  
This unit requires  
**2 PERSON LIFT**