


# WMACR Series Installation Instructions

POSITION POCKET ASSEMBLY ON WALL AND MARK MOUNTING HOLES. NOTE; THE HOLES ARE 16" ON CENTER HORIZONTALLY.

INSTALL FOUR SCREWS USING THE SPACER PROVIDED. USE ANCHORS IF REQUIRED.



SLIP THE POCKET ASSEMBLY OVER THE PRESET SCREWS.

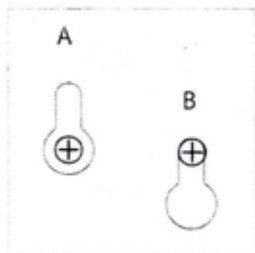

DIVIDERS SNAP INTO SLOTS ON BACK OF POCKET. WITH THE LARGE TAB ON TOP, SET TABS IN BACK SLOTS AND TWIST INTO PLACE.



## IMPORTANT

Before installation:

- > Locate all hardware - if using wall anchors, a 1/4" hole must be drilled first.
- > Peel film from "SNAP-DIVIDERS" before installing.

